



## Quick Guide





## ANNOUNCEMENTS

---

Please read the Announcements carefully before using this video camera for proper and safe operation, so as to bring its optimum performance into play and extend its service life.

- ◆ Do not expose the video camera to sunshine directly, nor point its lens to sunlight. Otherwise, the image sensor of the video camera may be damaged.
- ◆ Take good care of the video camera and prevent water or sand particles from entering the video camera when it is used on the beach or water, because water, sand particles, dust or component containing salt may damage the video camera.
- ◆ Keep the video camera contaminated free of dust and chemical materials. Place it in a cool, dry and well ventilated place. Do not place the video camera in a high temperature, moist or dusty place.
- ◆ Please check if the video camera can operate normally before use.
- ◆ If dirt or stain is accumulated on the video camera or on its lens, use soft, clean and dry rag to wipe it away gently. If the video camera or its lens is stained with sand particles, blow them away gently. Do not use cloth to wipe arbitrarily. Otherwise, it may scratch the surface of video camera or its lens.
- ◆ If it is required to clean camera surface, firstly blow away the sand dust accumulated on this surface, and

then wipe the camera gently with rag or tissue applicable to optical equipments. Please use the cleaning agent of video camera for wiping if necessary. Do not use organic solvent to clean the video camera.

- ◆ Do not touch the lens surface with fingers.
- ◆ Please back up the data if the memory card inside this video camera is used for the first time.
- ◆ The externally installed memory-cards are manufactured from precise electronic components. Data may be lost or damaged under the following circumstances:
  1. Improper use of the memory card.
  2. The memory card is bent, dropped or collided.
  3. Place it under high temperature or moist environment or expose to sunshine directly.
  4. Electrostatic or electromagnetic field exists around the memory card.
  5. This memory card is taken out or power supply is interrupted when this video camera or computer is connected to the memory card (i.e. during reading, writing and formatting).
  6. Touch the metal contact surface of the memory card with fingers or metal materials.

 
## **WATERPROOF CASE USING NOTICE**

 
---

- ◆ Before sealing the waterproof case, keep the camera housing's rubber seal clean, a single hair or grain of sand can cause a leak. You can test by closing the case without inserting the camera. Submerge the case completely in water for about a minute. Remove the case from the water, dry off its exterior with a towel, then open the case. If the entire interior is dry, the case is safe for use under water.
- ◆ Remember to put the Mode Switch in your desired recording position before inserting the camera in the waterproof case. There is no external button for the Mode Switch.
- ◆ After every use in salt water you will need to rinse the outside of the housing with non-salt water and dry. Not doing this can eventually cause corrosion of the hinge pin and salt buildup in the seal, which can cause failure.
- ◆ To clean the seal, rinse in fresh water and shake dry (drying with a cloth may cause lint to compromise the seal). Re-install the seal into the grooves in the backdoor of the housing.

## **INTRODUCTION TO APPEARANCE AND KEYPAD**

1. LCD display
2. Power button/Mode button
3. WIFI indicator (red)
4. Power - indicator/Charging indicator (blue)
5. Wifi button/MENU button
6. Busy button (red)
7. Shutter button/OK button
8. Lens×2
9. Triangle nut
10. Interface cover (USB/TF)
11. Speaker
12. Microphone
13. Rope hole
14. Reset hole

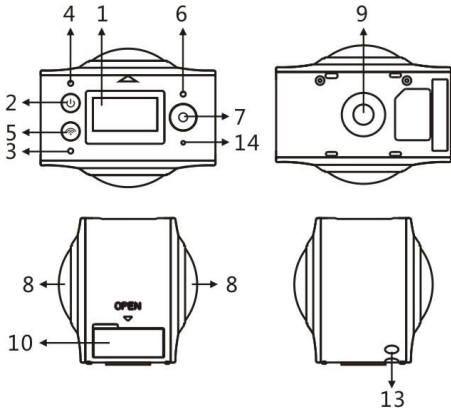

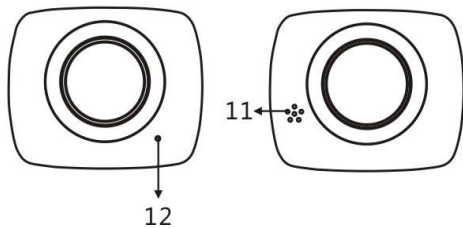

## SMARTPHONE APPLICATION



**IOS**



**ANDROID**

 


## **INSTALL SD CARD:**

Insert the Micro SD card you prepare into the slot as indicated, as shown on the right.

### **Important:**



- A high-speed Micro SD card between Class 6~Class 10 is a must; or else, this product may not work normally.
- Always turn off the camera before inserting or pulling out of the card.

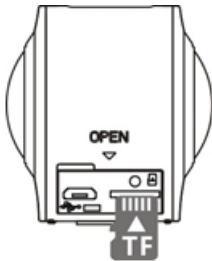

## HOW TO USE ACCESSORIES PROPERLY

It is strongly recommended to use the accessories originally provided by the manufacturer. It helps create a better product use experience and better shooting/recording effect.

  **Tripod:** Screw the tripod nut attached into the screw hole on the bottom of the camera. It serves both as a hand-held or fixed device.

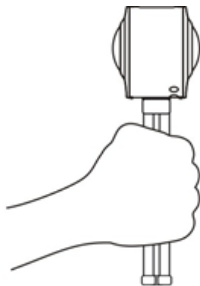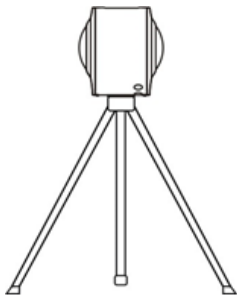

## USE MOBILE PHONE

Follow these steps to play panoramic videos or pictures on mobile phone or tablet.

### Download APP:

Scan QR Code or search for “**SYVR360**” on App Store to download and install the product APP.

Connect mobile phone and camera: Connect mobile phone and camera through WIFI connection

 
1. Turn on camera WIFI: Press camera WIFI button, and the display screen will display “WI-FI ON”, and then “**P3600\_XXXXX**”, and initial password is “**1234567890**”.



2. Turn on mobile phone WIFI, search for AP hot “P3600\_XXXXX” and select Connect.



3. **Activate APP:** Activate “SYVR360” APP on mobile phone or tablet, and click the upper right corner to “Search for Camera”.

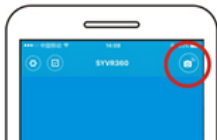

4. **Download:** Enter camera folder, select the file to be downloaded and click to download.



5. **Play:** Select the file on mobile phone and click to play.



## Effect of panoramic playing

The following effects are available if played on APP player



**Planet mode**



**Plane mode**



**VR mode**



## SAFETY-ENVIRONMENT



Your STOREX product has been laboratory tested; it complies with European guidelines corresponding to the CE labelling in force at the time of its launch.



Your STOREX product's components are traceable; this demonstrates the product's compliance to environmental guidelines (RoHS) in force at the time of its launch.



Once the product has reached the end of its lifespan, don't throw it in a dustbin. Return it to the retailer or bring it to a rubbish heap, to ensure the product is properly disposed of via a waste electrical and electronic equipment (WEEE) channel.



## WARRANTY REGISTRATION

In order to facilitate the management of your issue, should you contact our support team, we invite you to register your tablet guarantee on our website at the following address: <http://garantie.storex.eu>

For repairing, contact your dealer to repair your tablet under guarantee, or send your request via email to the following address: [support@storex.eu](mailto:support@storex.eu)

or by phone at:

**France:** 01 55 85 82 00 (local call charge to Paris)

**Spain:** 902 110 572 ([soporte.es@storex.eu](mailto:soporte.es@storex.eu))

**Portugal:** 308 800 836 ([apoio.pt@support.eu](mailto:apoio.pt@support.eu))

**England:** ([support.uk@storex.eu](mailto:support.uk@storex.eu))





**X'TREM** 

by

 **STOREX**