

UPDATE S'PHONE DC50G

1.1 Install SP Flash Tool

Download the software on the link below:

www.storex.fr/download/fw/SP_Flash_Tool_v5.rar

Unzip the file on your computer, you should have a folder named « **SP Flash Tool V5** ».

1.2 Install Universal ADB drivers

Download the S'Phone drivers on the link below:

www.storex.fr/download/fw/UniversalAdbDriverSetup.msi

www.storex.fr/download/fw/MT65XX_USB_VCOM_drivers.rar

Install driver and select « **Next** » until the end of installation.

1.3 Download the update file

Download the update file on the link below, then unzip the file on your PC. You should have a folder named **S'Phone_DC50G_20140627** »:

www.storex.fr/download/fw/S'Phone_DC50G_20140627.rar


Launch « **SP Flash Tool** », just click twice on the « **flash_tool.exe** » file, contained on « **SP Flash Tool** » folder.

download_scene.ini	19/07/2013 15:04
flash_tool.exe	26/12/2013 12:36
flashtool.qch	17/11/2013 14:50

2 Install the update (ROM)

Click on « **Scatter-loading** » then navigate to **MT65xx_Android_scatter_emmc.txt** file contained in « **S'Phone_DC40G_20140627** » folder.


Ignore advertisement message

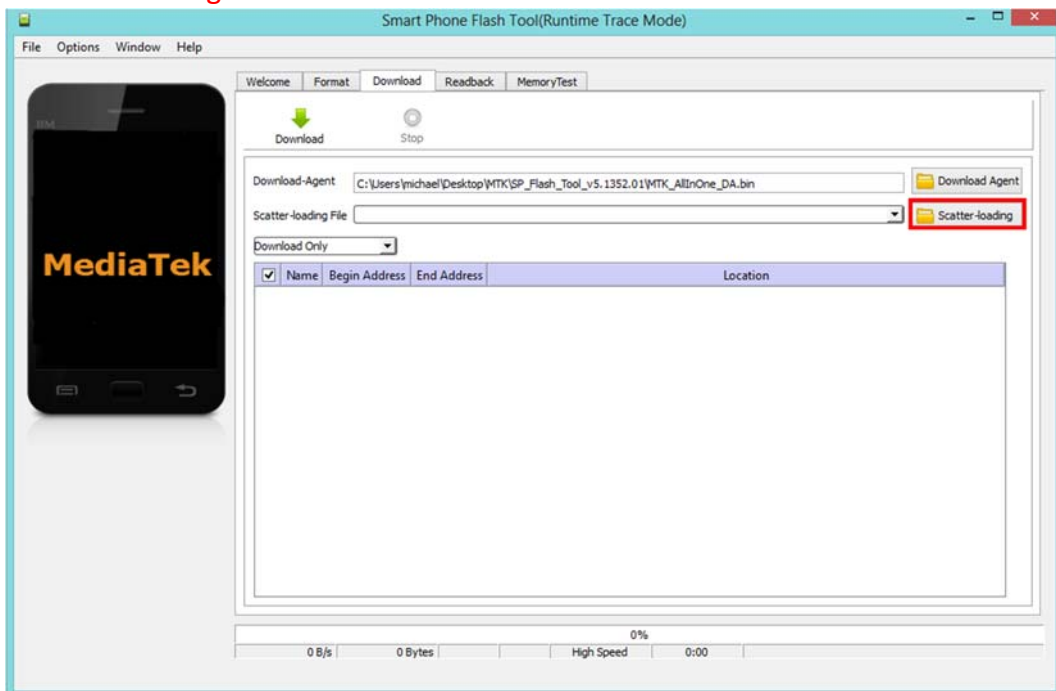


Select the file below then click on « **Open** ».

logo.bin	23/07/2014 16:40	Fichier BIN
MBR	23/07/2014 16:40	Fichier
MT6572_Android_scatter.txt	23/07/2014 16:40	Document texte
preloader_ratech72_wet_rlk_jb3.bin	23/07/2014 16:40	Fichier BIN

The windows below should appear.

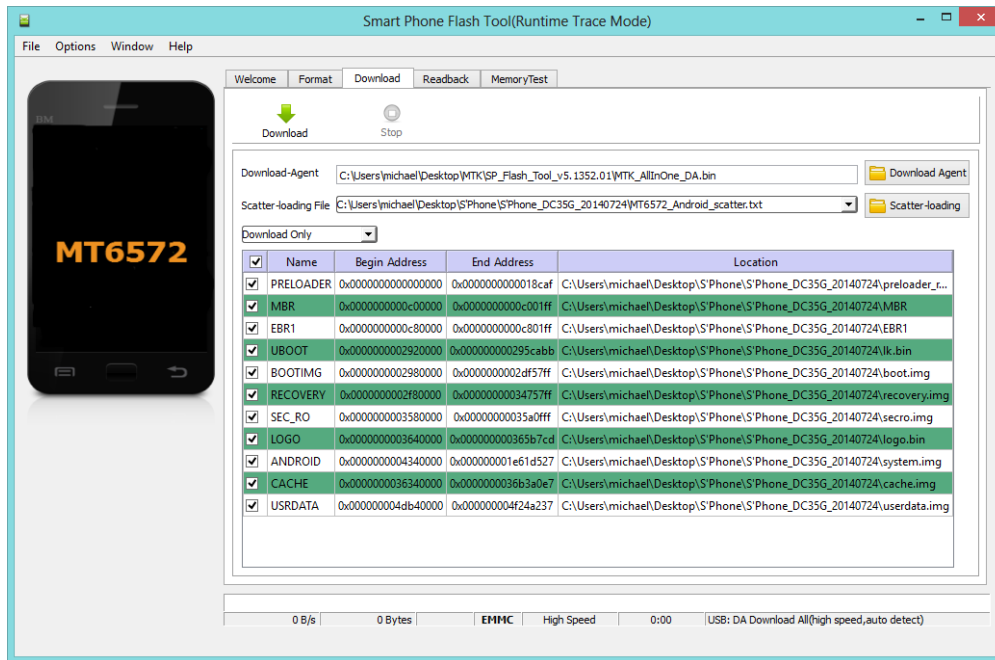


Click on « Download ».

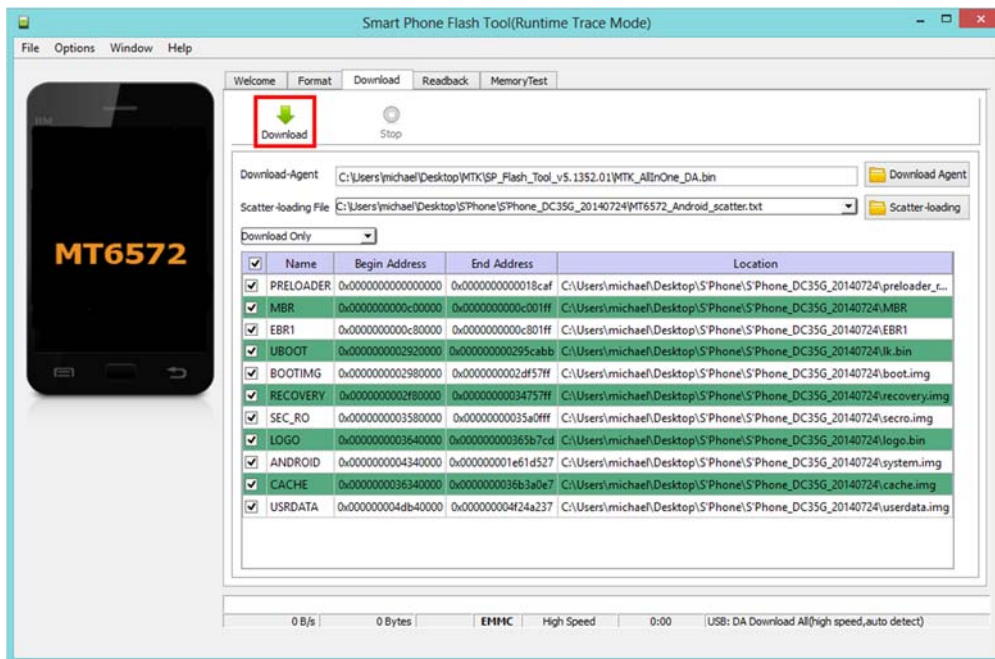


Connect you smartphone **powered off and battery out**, to your PC through USB.


The flashing process should begin.
The progression bar appears in RED.

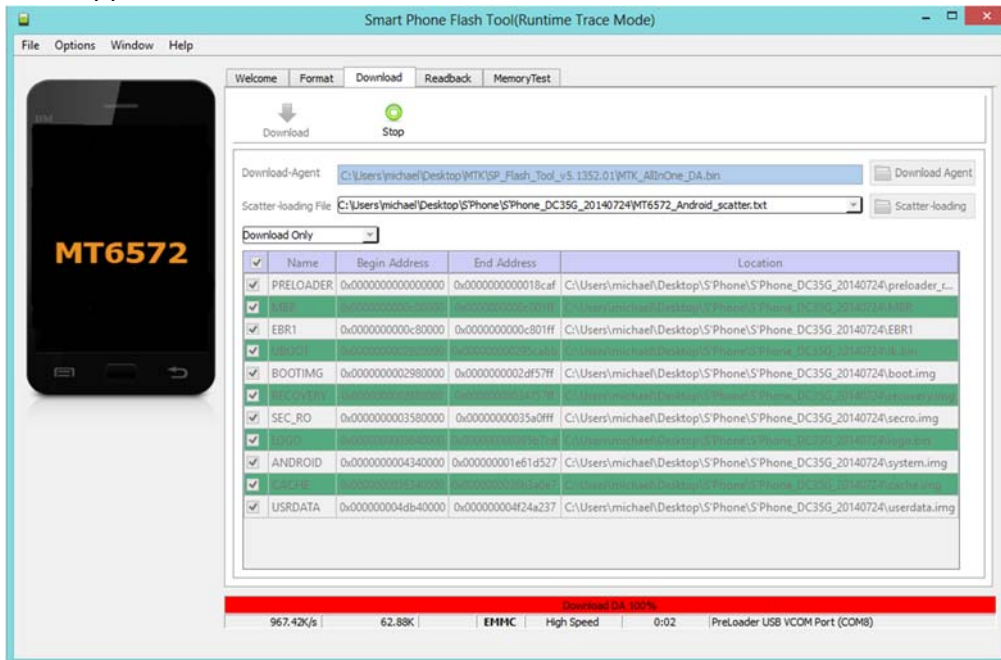

Then it changes to yellow.

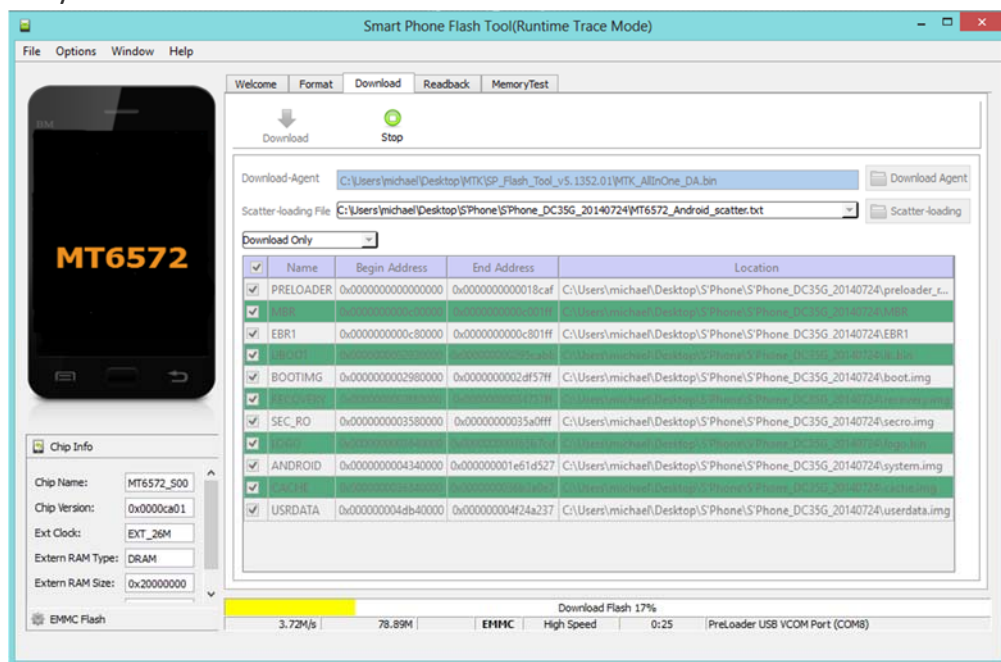

A window appear with an OK icon that indicate that the flashing process is over.

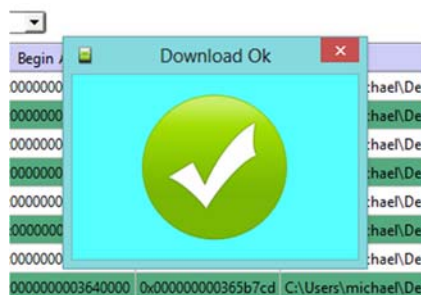

Unplug your smartphone then turn it on.

IMPORTANT HINT: If the flashing process do not begin with the **battery out** of the phone, please insert the battery and restart the flashing process. **ALWAYS PHONE TURNED OFF.**